


How to use Electrolux Professional Washers


- 1 Empty all clothing pockets and load washer.

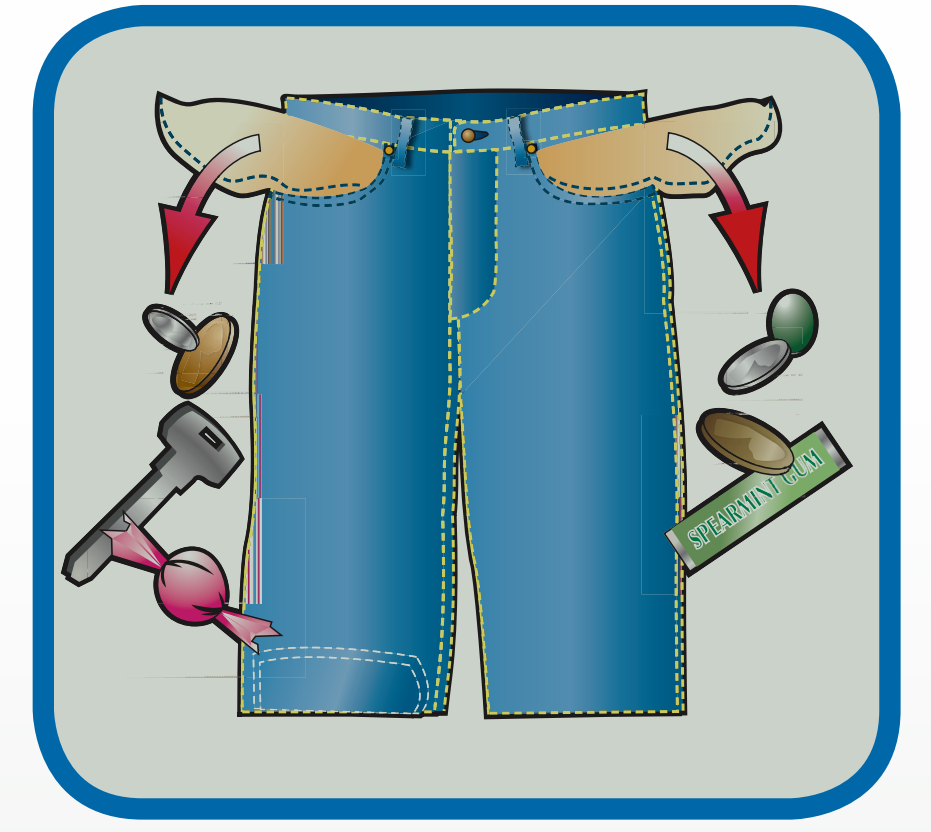

- 2 Close and lock door.



- 3 Add powder or liquids.
Use half the usual amount in our washers!
1/4 cup to 1/2 cup detergent is enough.

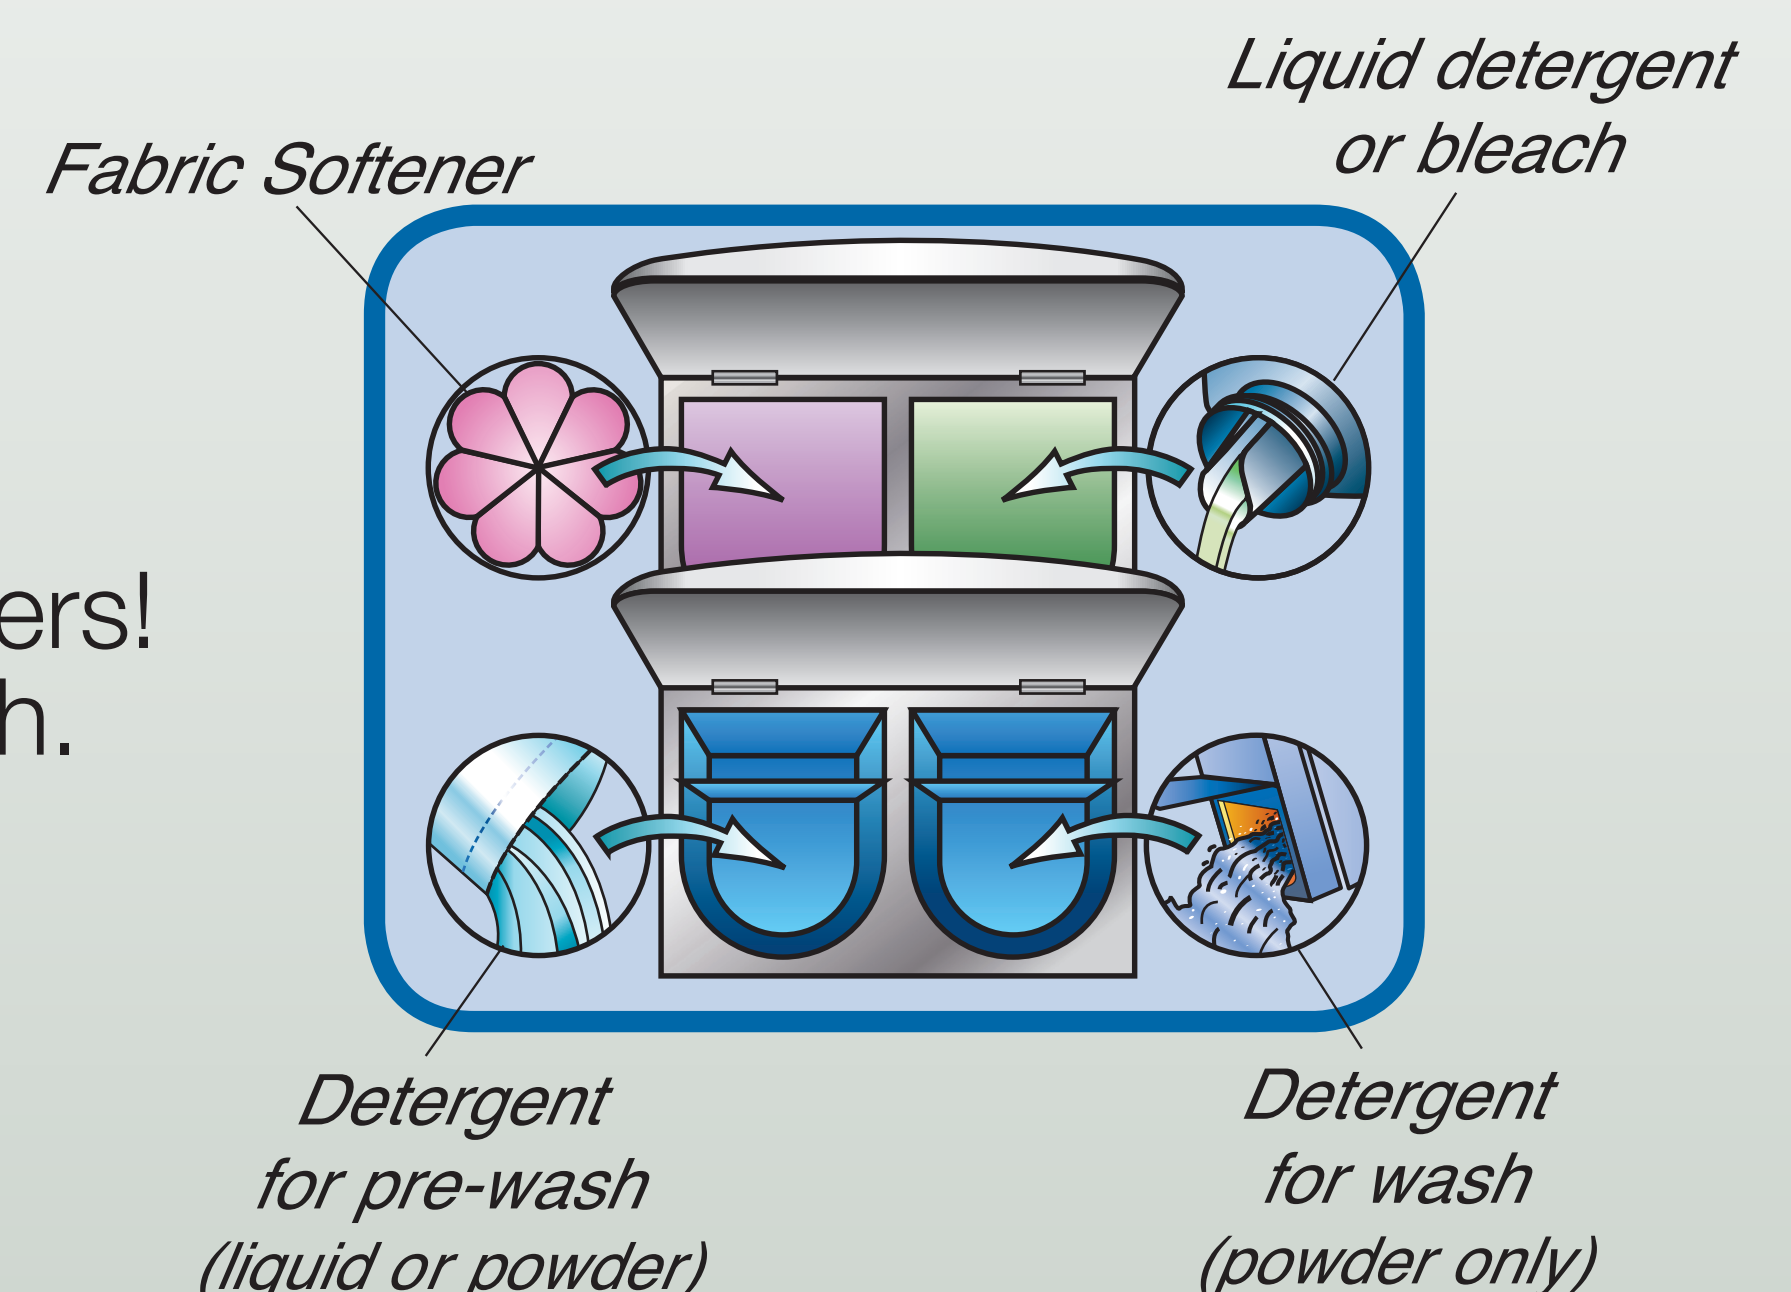

- 4 Turn knob to select wash cycle.



Push buttons  and/or  for wash options and/or rinse options.

- 5 Insert payment card. Push knob to start washer.



Thinking of you

 **Electrolux**